




How to change the sensor block LEDs on the Universal

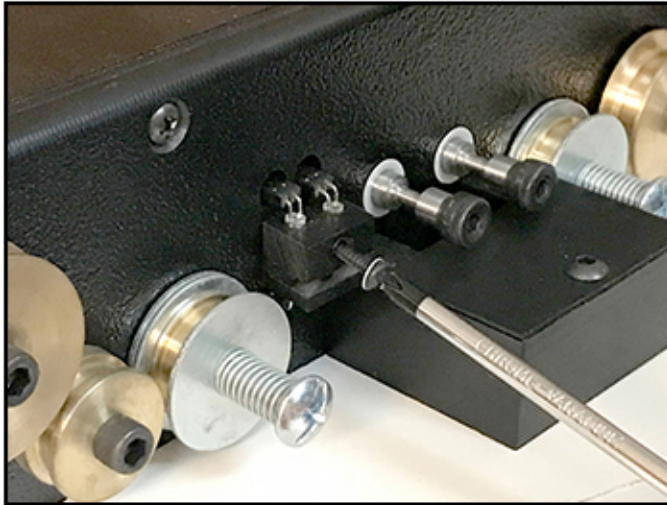


Step 1. Remove Screw

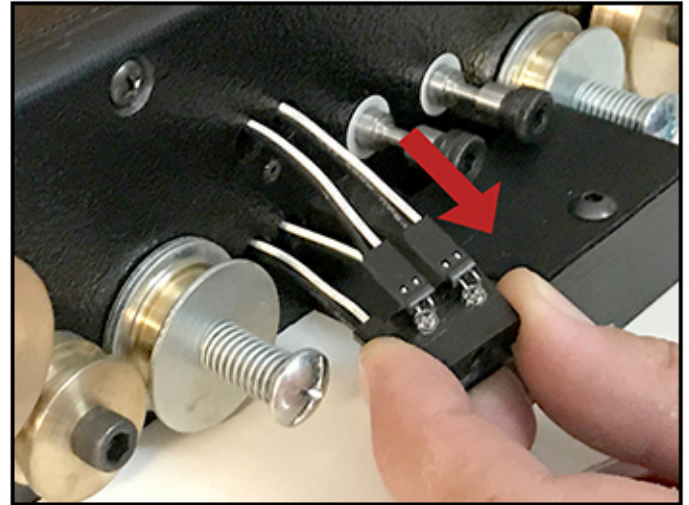


Step 2. Gently pull sensor block & wires

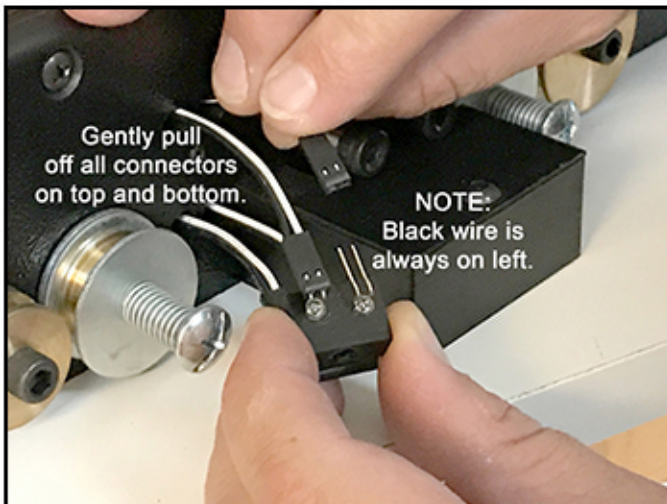


Step 3. Gently pull off all connectors

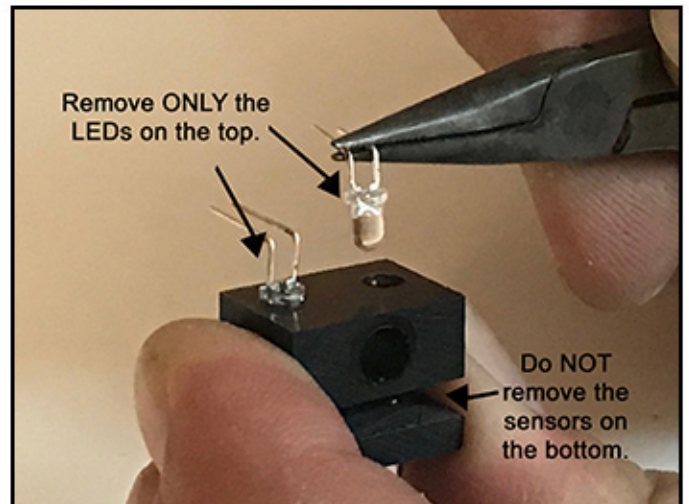

Step 4. Remove top LEDs only.

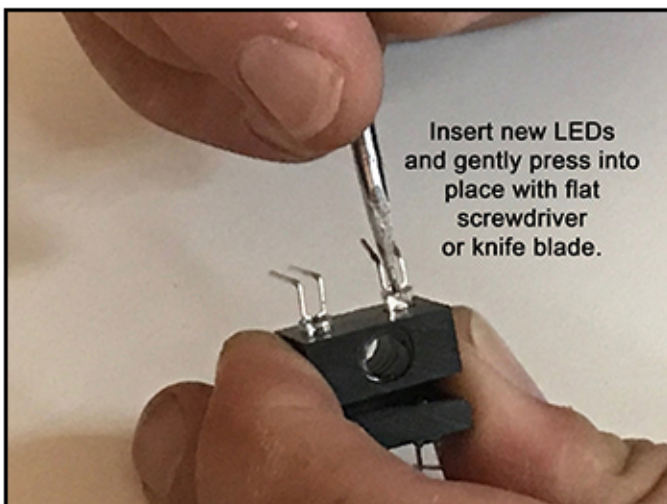


Step 5. Insert new LEDs into block

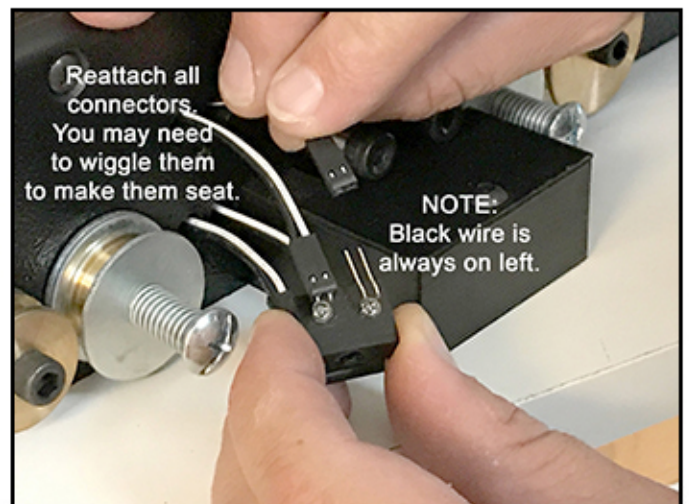


Step 6. Reattach all connectors


How to change the sensor block LEDs on the Universal

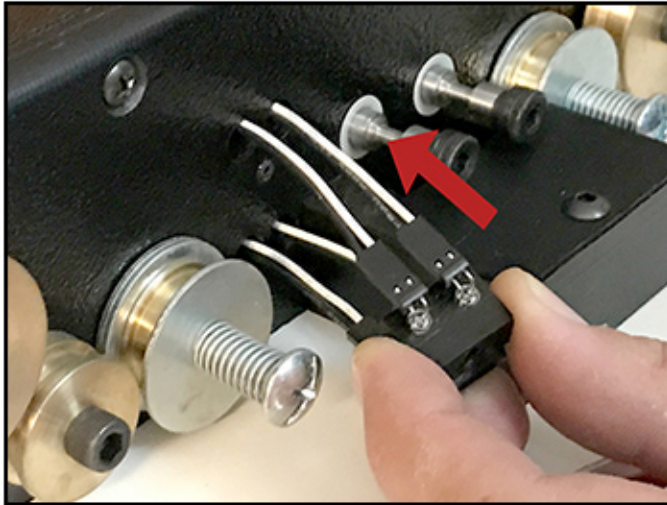

Step 7. Push wires back into box.

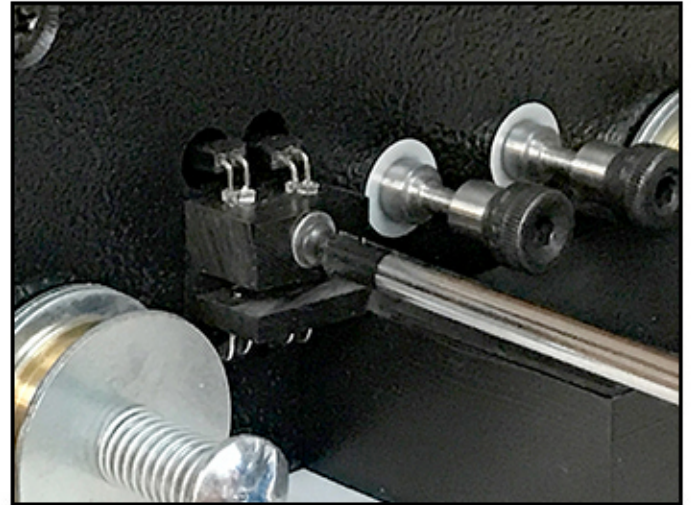

Step 8. Gently tighten screw

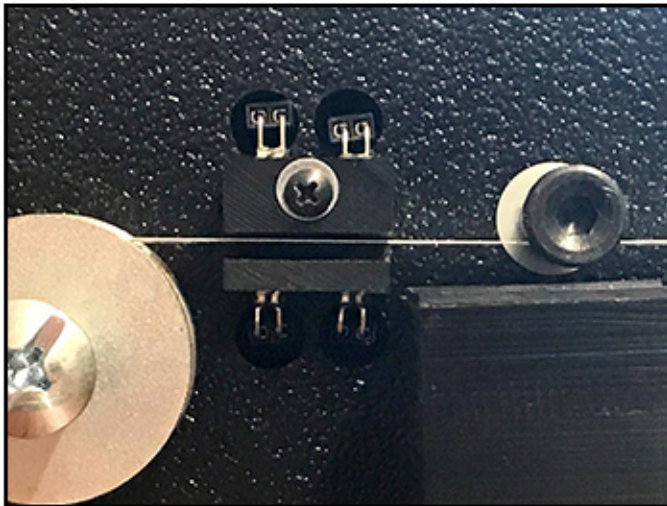

Step 9. Align sensor with film

You are finished!

NOTE: It is important that the film runs very near the top of the sensor slot without touching. You may need to loosen the screw and adjust several times to get it aligned correctly.